




DecoForme WoodenWall Fixing & Installation Guide


1. Acclimatisation and choice of glue

We recommend acclimatising wood panels to the new environment for 1-2 days, keeping them packed. Room temperature must be above 17°C and 35 - 65 % relative humidity must prevail. This will ensure that the panels get used to the climate of the new room. Use elastic polymer-based mounting adhesive to glue the panels to the wall. **Do not use dispersion-based (water based) adhesives, as this can lead to deformation of the panels.**

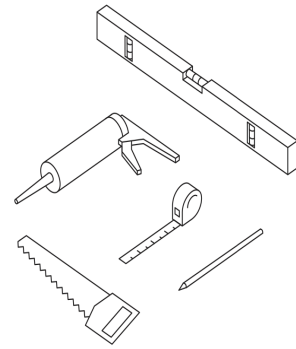

2. Wall preparation

Make sure that the surface on which you will install the panels is relatively flat. The surface must also be clean, dry (a maximum residual moisture of 5 %) and free of dust. The product is intended for use in rooms with relative humidity from 35% to 65%. The panels are made of natural wood, that is why use of them in high humidity places is not recommended.

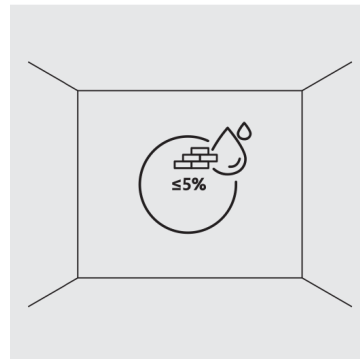

3. Fixing the panels to the wall

Use polymer-based flexible mounting adhesive to glue the panels to the wall. Do not use dispersion-based (water based) adhesives, as this can lead to deformation of the panels. When choosing an adhesive, follow the adhesive manufacturer's instructions about the surface onto which you plan to glue the panels, as well as the required amount of adhesive. Apply the glue as instructed. Make sure that the glue is also applied to the corners of the panels.

